Converts RS232 into an IR signal

The Just Add Power Flux Capacitor IR Dongle provides IR control of endpoint devices through the Just Add Power 2G Omega and 3G Ultra product lines. Conveniently powered through Receiver USB port.

Connects to RS232 port on a Receiver or Transmitter


Use the Flux Capacitor IR Dongle combined with Just Add Power drivers to control all of your IR devices over a single IP connection. Each IR Dongle becomes an additional IR port on the control system.

USB

RS232 IN


IR OUT



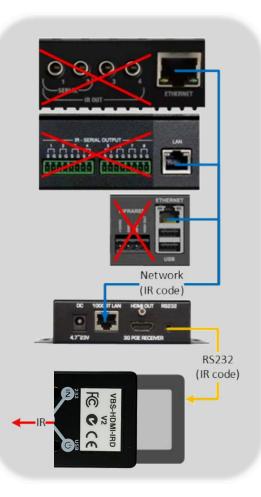



All measurements in millimeters (mm)

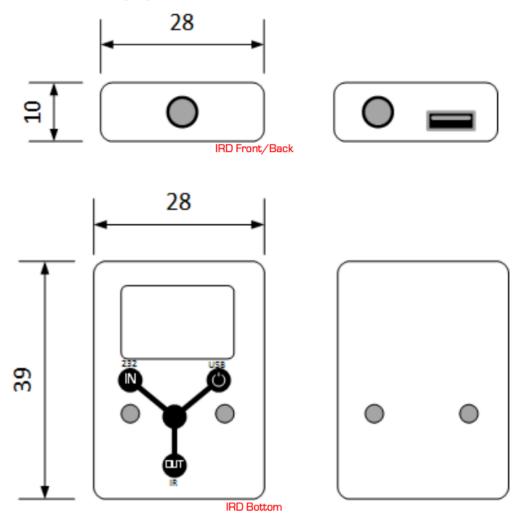

Specifications

Compliance	RoHS/FCC/CE	Ports	USB micro (power) 3.5mm (IR Out) 3.5mm (Serial In)
Overall Dimensions & Weight	39 x 28 x 10 mm 1.5" x 1.1 x 0.4" inch 28 g / 1 oz	Power Supply (not included)	DC5V, 0.5A minimum USB micro
Operating Temp	0-60 °C / 32-140 °F		